


# ROMAN SCHWALLER NONET

Technical Rider / Input List

## INPUT LIST

CH	INSTRUMENT	MIKE	BRAND	STAND	SPECIALS
01	Bass Drum	RE-20	EV	SSB	Dm: 18", 14", 12"
02	Snare Drum	SM-57	SHURE	SSB	
03	Overhead L	KM-140	NEUMANN	LSB	
04	Overhead R	KM-140	NEUMANN	LSB	
05	Bass	KM-88 o.ä.	NEUMANN	-	in den Steg
06	Bass	RE-20	EV	SSB	vor dem Verst.
07	Piano LO	TLM	NEUMANN	LSB	
08	Piano HI	TLM	NEUMANN	LSB	
09	Trombone	RE-20	EV	LSB	
10	Tenor Sax	RE-20	EV	LSB	
11	Trumpet/Flugelhorn	RE-20	EV	LSB	meistens lead!!
12	French Horn	SM-57	SHURE	LSB	Mik. von hinten!
13	Bass Clarinet LO	KM-150	NEUMANN	SSB	
14	Bass Clarinet HI	KM-150	NEUMANN	LSB	
15	Tuba	609	SENNHEISER	LSB	
16	Ansage (Schwaller)	BETA 87	SHURE	LSS	

Legende: SSB=small stand with boom LSB=large stand with boom LSS=large stand straight

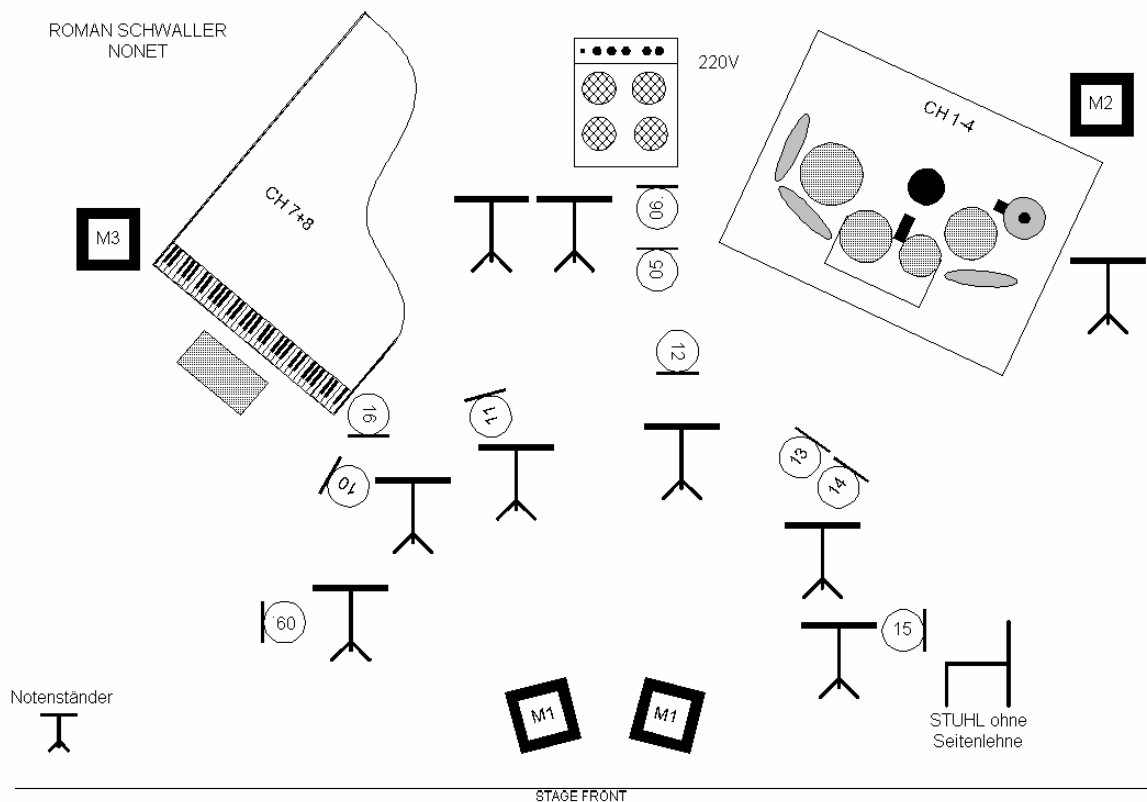

Bitte beachten:

Wenn die Lichtverhältnisse auf der Bühne nicht zulassen, Noten zu lesen, wird für jeden Notenständer eine Beleuchtung benötigt. Diese Lampen bitte verfügbar halten. Unbedingt **9 Notenpulte** (keine klapprigen Notenständer), wenn möglich in schwarz. KEINE SIDEFILLS!

Schlagzeug: 18" Bass Drum, 14" Stand Tom, 12" Hänge Tom, sämtliche Hardware (ohne Becken) wie Snare, Snareständer, 3 Beckenständer, Hi-Hat Maschine, Bass Drum Pedal, Sitz.

Bassverstärker: Gallien-Krüger 200 MB oder Polytone Mini-Brute III